

jura®



WE6 Instructions for Use



For your safety: read and understand manual before use.

JURA Type 736

Your WE6

IMPORTANT SAFEGUARDS	4
Control elements	8
1 Preparing and using for the first time	10
JURA on the Internet.....	10
Setting up the machine	10
Filling the bean container	10
Determining the water hardness	10
First-time use	11
Connect accessory (with wireless connection).....	13
2 Preparation	14
Espresso, coffee and other specialty coffees.....	15
Two specialty coffees.....	15
Permanently setting the amount of water for the cup size	15
Adjusting the grinder	16
Hot water	17
3 Daily operation	18
Filling the water tank.....	18
Switching on the machine.....	18
Daily maintenance	18
Regular maintenance	19
Switching off the machine.....	19
4 Permanent settings in programming mode	20
Adjusting the product settings.....	21
Enable or disable setting of cup volume	22
Enable or disable one-off settings	23
Enable and disable products.....	23
Automatic switch-off.....	24
Setting the water hardness	24
Unit for amount of water.....	25
Language	25
Querying information	25
5 Maintenance	27
Rinsing the machine.....	27
Inserting/changing the filter.....	28
Cleaning the machine	28
Descaling the machine	30
Cleaning the bean container.....	32
Descaling the water tank.....	33
6 Display messages	34

7	Troubleshooting	35
8	Transport and environmentally friendly disposal	36
	Transport / Emptying the system.....	36
	Disposal.....	36
9	Technical data	37
10	Index	38
11	JURA contact details / Legal information	40

Symbol description

Warnings



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to personal injury.

Symbols used



Prompt to take action. This symbol means that you are being prompted to perform some action.



Information and tips to make it even easier to use your JURA.



Display message

IMPORTANT SAFEGUARDS

Follow the basic safety precautions

When using electrical appliances, basic safety precautions shall always be followed, to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons, do not immerse power cord, plugs, or body of machine in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of an accessory attachment not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to 'OFF' then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use extreme caution when dispensing hot steam, hot water or hot coffee.

SAVE THESE INSTRUCTIONS.

Pass them on to any subsequent user.

Intended use The appliance is designed and intended for household use only. It shall only be used for coffee preparation and to heat milk and water, according to these instructions. Use for any other purpose will be deemed improper. JURA Elektroapparate AG cannot accept any responsibility for the consequences of improper use.

People, including children, who

- do not have the physical, sensory or mental capabilities to use the appliance safely or
- are inexperienced or lack knowledge in how to use the appliance safely

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.

Special power cord set instructions

- A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- The cord shall be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- This appliance has a 3-pin grounded plug.
- Do not modify the plug in any way.

Extension cords are available and may be used if care is exercised in their use.

If the user chooses to use an extension cord,

- the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and
- if the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord, and
- the longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.

⚠ WARNING



To reduce the risk of fire or electric shock, DO NOT remove any service covers. DO NOT modify the appliance in any way that is not described in these instructions. NO user serviceable parts included. Repair MUST be done by authorized personnel only.

In the event of signs of damage, for example if there is a smell of burning, unplug the machine immediately from outlet and contact JURA customer service.

IMPORTANT SAFEGUARDS

⚠ CAUTION


Any servicing other than cleaning and user maintenance shall be performed by an authorized service representative:

- Do not immerse base in water or try to disassemble.
- Do not put the appliance or any individual parts in the dishwasher.
- Check voltage to be sure that the voltage indicated on the name plate complies with your voltage. The name plate is located on the underside of the appliance.
- Never use warm or hot water to fill the water container. Use cold water only.
- Keep your hands and the cord away from hot parts of the appliance during operation.

There is a risk of scalds or burns on the spouts and the hot water nozzle.

- Keep children away.
- Do not touch any hot parts. Use the handles or knobs provided.

NOTICE

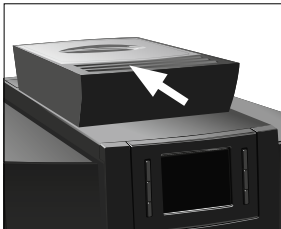

- Never clean with scouring powders or hard implements.
- Ensure that the ventilation slots are not covered.
- Never pull out the drip tray during the brewing process. Only pull the drip tray when the display instructs you or when the appliance is ready for use.

NEVER DO (or you will void your warranty protection):

- Never fill instant coffee, chocolate mix etc. into the bean container or ground coffee funnel (filler funnel for ground coffee). It will damage the functioning of the brewing chamber.
- Never fill sugar coated coffee beans into the bean container. In case of doubt, call your dealer.
- Never fill anything other than coffee beans into the bean container (no chocolate, no rice, no nuts, no spices, nothing other than roasted coffee beans).
- Never fill frozen beans into the bean container. If you store beans in the freezer, let them thaw 3 to 4 hours before filling them into the bean container.

 
IMPORTANT SAFEGUARDS

- Never fill anything but fresh, cold and clean water into the water tank, except when decalcifying.
- Never use mineral or carbonated water. You can use tap water, bottled water, spring water and reverse osmosis water.
- Never do anything with the machine which is not described in these instructions. In case of doubt, call your dealer.

Control elements



- 1 Cover of filler funnel for cleaning tablet
- 2 Filler funnel for cleaning tablet
- 3 Bean container with aroma preservation cover
- 4 Water tank cover
- 5 Water tank
- 6 Power cord (back of the machine)
- 7 Coffee grounds container
- 8 Drip tray

- 9 Cover cap for grinder adjustment switch
- 10 Grinder adjustment switch
- 11 On/Off button 
- 12 Hot-water nozzle
- 13 Height-adjustable coffee spout
- 14 Cup platform



- 1 Display
- 2 Multi-function buttons (button function depends on what is shown in the display)
- 3 Switch for hot water preparation




Service socket for optional JURA Smart Connect

1 Preparing and using for the first time

JURA on the Internet

Visit us on the Internet (www.jura.com). You will find interesting and up-to-date information on your WE6 and on every aspect of coffee.

Setting up the machine

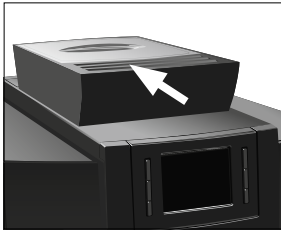

When setting up your JURA, please note the following:

- Place the JURA on a horizontal surface that is not sensitive to water.
- Choose a spot for your JURA which protects the machine against overheating. Ensure that the ventilation slots are not covered.

Filling the bean container

NOTICE


Coffee beans which have been treated with additives (e.g. sugar), ground coffee or freeze-dried coffee will damage the grinder.

- ▶ Only use roasted, untreated coffee beans to fill the bean container.
-
- ▶ Remove the aroma preservation cover.
 - ▶ Remove any dirt or foreign objects from inside the bean container.
 - ▶ Fill the bean container with coffee beans and close the aroma preservation cover.

Determining the water hardness

When you use the machine for the first time, you must set the water hardness. If you do not know the hardness of your water, you can find this out first. Use the Aquadur® test strips supplied with the machine.

- ▶ Hold the test strip briefly (for 1 second) under flowing water. Shake off the water.
- ▶ Wait for about 1 minute.

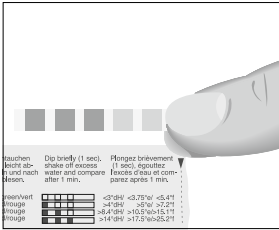

- ▶ You will then be able to read the degree of water hardness from the discoloration of the Aquadur® test strip and the description on the packaging.

Level	Display German Degree (°dH)	Degrees of general hardness (°dGH)	Parts per million (ppm)	Indicator Strip number of 'reddish' fields
Not active	-	-	-	-
Very soft water	<3	<3	< 53.4	None
Soft water	> 4	> 4	> 71	1
Hard water	> 8.4	> 8.4	> 150	2
Very hard water	> 14	> 14	> 250	3

First-time use

 


If the machine is operated with a defective power cord, there is a danger of potentially fatal electric shock.

- ▶ Never use a machine which is damaged.
- ▶ Never use a machine which has a defective power cord.

i The water volume is given as standard in 'oz'. You can change this setting to 'ml' in programming mode (see Chapter 4 'Permanent settings in programming mode – Unit for amount of water').

Precondition: The bean container has been filled.

- ▶ Insert the power plug into a power socket.
- ▶ Press the On/Off button  to switch the WE6 on.

'Choose language'

i To display more languages, press the '>' button.

- ▶ Press the button that corresponds to the language you want, e.g. 'English'.

'Saved' appears briefly on the display.

'Water hardness'

1 Preparing and using for the first time

i If you do not know the hardness of your water, you must find this out first (see Chapter 1 ‘Preparing and using for the first time – Determining the water hardness’).

▶ Press the ‘<’ or ‘>’ button to change the setting for the water hardness.

▶ Press the ‘Save’ button.

‘Saved’ appears briefly on the display.

‘Filter operation’

▶ Place a receptacle under the hot-water nozzle and under the coffee spout.

▶ Remove the water tank and rinse it with cold water.



▶ Insert the CLEARYL Pro Smart filter cartridge into the water tank.


▶ Close the filter holder. It will click into place audibly.

▶ Fill the water tank with fresh, cold water and reinsert the tank.

i The machine automatically detects that you have just inserted the filter cartridge.


‘Saved’ appears briefly on the display.

‘Open switch’

▶ Turn the switch to the  position.

‘Filter is being rinsed’, water flows out of the hot-water nozzle.

Rinsing of the filter stops automatically. ‘Close switch’ appears on the display.

▶ Turn the switch to the  position.

‘System is filling’

‘Empty drip tray’

▶ Empty the drip tray and put it back into the machine.

‘Machine is rinsing’

The start screen is displayed. Your WE6 is ready for use.

Connect accessory (with wireless connection)

You have the option of connecting your WE6 wirelessly to a compatible accessory. To do this, the JURA Smart Connect must be plugged into the service socket.

- i** The Smart Connect can be protected against unauthorized access using a PIN. Activate the PIN function via J.O.E.® – your JURA app. You will find more information at www.jura.com/smartconnect.
- i** Please note that you can only connect either the accessory or J.O.E.® to the coffee machine via Smart Connect and not both at the same time.

Precondition: The start screen is displayed.

- ▶ Position the accessory near the coffee machine (a maximum of 0.5 m away).
- ▶ Switch on the accessory and the coffee machine.
- ▶ Press the reset button of the Smart Connect (e.g. with a paper clip).
- ▶ Then (within 30 sec.) press and hold the reset button of the accessory until the LED lights up to indicate the successful connection.

2 Preparation

 **WARNING**

Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- ▶ Use extreme care when handling hot liquid or steam.
 - ▶ Allow liquid to cool down before drinking.
 - ▶ In the event of scalding, rinse affected area with cold water and seek medical attention.
 - ▶ Keep children AWAY.
-

i You can stop the machine at any time while a specialty coffee or hot water is being prepared. Just press any button (for a specialty coffee) or return the switch to its original position (for hot water).

i During the grinding operation you can select the coffee strength of **single products** by pressing the ‘<’ and ‘>’ buttons.

i During preparation you can change the preset **amount of water** by pressing the ‘<’ and ‘>’ buttons.

i The water volume is given as standard in ‘oz’. You can change this setting to ‘ml’ in programming mode (see Chapter 4 ‘Permanent settings in programming mode – Unit for amount of water’).

Coffee tastes best served hot. A cold porcelain cup cools the beverage – and impairs the taste. We therefore recommend prewarming the cups. The full coffee aroma can develop only in prewarmed cups. You can purchase a JURA cup warmer from your specialized dealer.

You can make **permanent settings** for all products in programming mode (see Chapter 4 ‘Permanent settings in programming mode – Adjusting the product settings’).

Espresso, coffee and other specialty coffees



Ristretto, espresso, coffee and special coffee are all prepared following this model.

Example: Proceed as follows to prepare one coffee.

Precondition: The start screen is displayed.

- ▶ Place a cup under the coffee spout.
- ▶ Press the **'Coffee'** button.
Preparation starts. **'Coffee'** and the coffee strength are displayed. The preset amount of water for coffee flows into the cup.
Preparation stops automatically. Your JURA is once more ready for use.

Two specialty coffees



To prepare **two** specialty coffees, press the appropriate preparation button twice (within approximately 1 second).

Example: Proceed as follows to prepare two espressos.

Precondition: The start screen is displayed.

- ▶ Place two cups under the coffee spout.
- ▶ Press the **'Espresso'** button **twice (within 1 second)** to start preparation.
'2 espressi', the preset amount of water flows into the cups.
Preparation stops automatically. Your JURA is once more ready for use.

Permanently setting the amount of water for the cup size



It is easy to permanently adjust the amount of water for all **single products** to the cup size. Adjust the amount once as shown in the following example. Every time you prepare a drink in the future, this amount will be dispensed.

Example: Proceed as follows to **permanently** set the amount of water for one coffee.

Precondition: The start screen is displayed.

- ▶ Place a cup under the coffee spout.
- ▶ Press and **hold** the **'Coffee'** button until **'Enough coffee? Press button'** appears.
- ▶ Release the **'Coffee'** button.
Preparation starts and the coffee flows into the cup.

- ▶ Press any button except 'Cancel' as soon as there is sufficient coffee in the cup.
Preparation stops. 'Saved' appears briefly on the display. The set amount of water for one coffee is permanently stored. Your JURA is once more ready for use.

- i** You can alter this setting at any time by repeating the above procedure.
- i** You can also permanently set the amounts for all single products in programming mode (see Chapter 4 'Permanent settings in programming mode – Adjusting the product settings').

Adjusting the grinder

You can adjust the grinder on a continuous scale to suit the degree of roast of your coffee.

NOTICE

If you adjust the consistency of grind when the grinder is not operating, the grinder adjustment wheel could be damaged.

- ▶ Only adjust the consistency of grind when the grinder is running.

The consistency of grind is correct if the coffee flows regularly from the coffee spout. In addition a fine, thick crema forms.

Example: Proceed as follows to change the consistency of grind **during** the preparation of an espresso.

- ▶ Place a cup under the coffee spout.
- ▶ Open the cover of the grinder adjustment switch.
- ▶ Press the 'Espresso' button to start preparation.
- ▶ Turn the grinder adjustment switch to the desired position **while** the grinder is running.

The preset amount of water flows into the cup. Preparation stops automatically.

- ▶ Close the cover of the grinder adjustment switch.



Hot water



⚠ CAUTION

There is a danger of scalding from hot water splashes.

- ▶ Avoid direct contact with the skin.



Precondition: The start screen is displayed.

- ▶ Place a cup under the hot-water spout.
- ▶ Turn the switch to the  position.
'Hot water', the preset amount of water flows into the cup.
Preparation stops automatically.
'Switch close'
- ▶ Turn the switch to the  position.
Your JURA is once more ready for use.

3 Daily operation

Filling the water tank

Daily maintenance of the machine and hygiene when handling coffee and water are key to a perfect coffee result in the cup every time. You should therefore change the water **daily**.

NOTICE Milk, sparkling mineral water or other liquids can damage the water tank or the machine.


- ▶ Only fill the water tank with fresh, cold water.

- ▶ Open the water tank cover.
- ▶ Remove the water tank and rinse it with cold water.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
- ▶ Close the water tank cover.




Switching on the machine



- ▶ Place a receptacle under the coffee spout.
- ▶ Press the On/Off button  to switch the JURA on.
'Welcome to JURA'
'Machine is rinsing', the system is rinsed. The rinse stops automatically. The start screen is displayed. Your JURA is ready for use.

Daily maintenance

To ensure that you get many years of reliable service out of your JURA and to guarantee the optimum coffee quality, the machine requires daily maintenance.

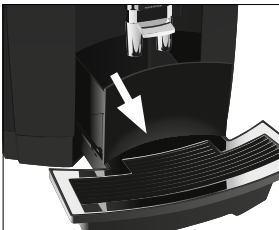

- ▶ Pull out the drip tray.
- ▶ Empty the coffee grounds container and the drip tray. Rinse them both with warm water.

i Always empty the coffee grounds container when the machine is **switched on**. This is the only way of resetting the coffee grounds counter.

- ▶ Refit the coffee grounds container and the drip tray.
- ▶ Rinse the water tank with clean water.
- ▶ Wipe the surface of the machine with a clean, soft, damp cloth (e.g. microfiber cloth).

Regular maintenance


Carry out the following maintenance actions **regularly** or **as required**:

- Clean the inside of the water tank, e.g. with a brush. Further information about the water tank is provided in these instructions for use (see Chapter 5 'Maintenance – Descaling the water tank').
- Traces of coffee may stick to the top and bottom of the cup platform. If this happens, clean the cup platform.

Switching off the machine

When the JURA is switched off, the system is automatically rinsed if a specialty coffee has been prepared.

Precondition: The start screen is displayed.

- ▶ Place a receptacle under the coffee spout.
- ▶ Press the On/Off button .

'Machine is rinsing', the system rinses itself. The operation stops automatically. Your JURA is switched off.



4 Permanent settings in programming mode



WARNING

Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- ▶ Use extreme care when handling hot liquid or steam.
- ▶ Allow liquid to cool down before drinking.
- ▶ In the event of scalding, rinse affected area with cold water and seek medical attention.
- ▶ Keep children AWAY.

Press the ‘P’ button to enter programming mode. You can navigate through the program items and permanently save the required settings using the multi-function buttons. The following settings can be made:

Program item	Sub-item	Explanation
'1/5'	'Clean', 'Descale', 'Filter' (only if filter is activated)	▶ Start the required maintenance program here.
'2/5'	'Rinse the coffee system', 'Information'	▶ Here you can start coffee system rinsing or find out what maintenance actions are required.
'3/5'	'Expert mode'	▶ Select your settings for specialty coffees and hot water.
	'Customise cup fill volume'	▶ Disable the function "Permanently setting the amount of water for the cup size".
	'One-off settings'	▶ Specify whether or not to allow one-off settings during preparation.
	'Lock/enable'	▶ Enable or disable individual products.
'4/5'	'Choose language'	▶ Select your language.
	'Units'	▶ Select the unit for the amount of water.
	'Switch off after'	▶ Set the time after which the JURA should switch off automatically.
	'Water hardness'	▶ Adjust the water hardness.
'5/5'	'Product counter', 'Day counter', 'Maintenance counter', 'Version'	▶ Keep track of all prepared products and view the maintenance status.

Adjusting the product settings



Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- ▶ Use extreme care when handling hot liquid or steam.
- ▶ Allow liquid to cool down before drinking.
- ▶ In the event of scalding, rinse affected area with cold water and seek medical attention.
- ▶ Keep children AWAY.

In the program item '3/5' / 'Expert mode' you can make individual settings for all specialty coffees and hot water. The following permanent settings can be made:

Product	Coffee strength	Amount	Temperature
'Ristretto', 'Espresso'	8 levels	Water: 0.5 oz – 2.5 oz (15 ml – 80 ml)	normal, high
'Coffee', 'Special'	8 levels	Water: 0.5 oz – 8.0 oz (25 ml – 240 ml)	normal, high
'2 ristretti', '2 espressi', '2 coffees'	–	Water: The amount set for the single product is doubled.	as for single product
'Hot water'	–	Water: 0.5 oz – 15.0 oz (25 ml – 450 ml)	low, normal, high

Permanent settings in programming mode always follow the same model.

Example: Proceed as follows to change the coffee strength for one coffee.

- ▶ Press the 'P' button.
- ▶ Press the '>' button several times until '3/5' is displayed.
- ▶ Press the 'Expert mode' button.
'Expert mode'

i Next select the button of the product for which you would like to make settings. No product is prepared at this point.

i To display more products, press the '>' button (bottom right).

4 Permanent settings in programming mode

- ▶ Press the 'Coffee' button.
'Coffee'
- ▶ Press the 'Coffee strength' button.
'Coffee' and the coffee strength is displayed.
- ▶ Press the '<' or '>' button to change the setting for the coffee strength.
- ▶ Press the 'Save' button.
'Saved' appears briefly on the display.
'Coffee'
- ▶ Press the 'L' button for **around 2 seconds** to exit programming mode.

Enable or disable setting of cup volume

In the program item '3/5' / 'Customise cup fill volume' you can make the following setting:

- 'Active': The function 'Permanently setting the amount of water for the cup size' is activated. You can adjust the amount of water to the cup size by pressing and holding the relevant preparation button.
- 'Inactive': The function 'Permanently setting the amount of water for the cup size' is deactivated. The amount of water **cannot** be adjusted to the cup size by pressing and holding the relevant preparation button.

Example: Proceed as follows to disable the function 'Permanently setting the amount of water for the cup size'.

- ▶ Press the 'P' button.
- ▶ Press the '>' button several times until '3/5' is displayed.
- ▶ Press the 'Customise cup fill volume' button.
'Customise cup fill volume'
- ▶ Press the 'Inactive' button.
- ▶ Press the 'Save' button.
'Saved' appears briefly on the display.
'3/5'
- ▶ Press the 'L' button to exit programming mode.

Enable or disable one-off settings

In the program item '3/5' / 'One-off settings' you can make the following setting:

- **'Active'**: One-off settings can be made during preparation (e.g. coffee strength or amount of water).
- **'Inactive'**: One-off settings cannot be made during preparation. The product is prepared according to the settings in programming mode ('3/5' / 'Expert mode').

Example: Proceed as follows to disable one-off settings during preparation.

- ▶ Press the 'P' button.
- ▶ Press the '>' button several times until '3/5' is displayed.
- ▶ Press the 'One-off settings' button.
'One-off settings'
- ▶ Press the 'Inactive' button.
- ▶ Press the 'Save' button.
'Saved' appears briefly on the display.
'3/5'
- ▶ Press the 'L' button to exit programming mode.

Enable and disable products

In the program item '3/5' / 'Lock/enable' you can enable or disable each product individually.

Example: Proceed as follows to disable the preparation of hot water.

- ▶ Press the 'P' button.
- ▶ Press the '>' button several times until '3/5' is displayed.
- ▶ Press the 'Lock/enable' button.
'Lock/enable'

i The lock symbol beside the product name indicates whether the product is enabled or disabled. If the lock is closed, the product is disabled.

- ▶ Press the '>' button until the product 'Hot water' is displayed.
- ▶ Press the 'Hot water' button.
The lock is closed. Hot water preparation is now disabled.
- ▶ Press the 'L' button for **around 2 seconds** to exit programming mode.

Automatic switch-off

By instructing your JURA to automatically switch itself off, you can cut down your energy consumption. If this function is activated, your JURA switches off automatically after the preset time following the last action on the machine.

You can set the automatic switch-off to 15 minutes, 30 minutes or 1–9 hours.

- ▶ Press the 'P' button.
- ▶ Press the '>' button several times until '4/5' is displayed.
- ▶ Press the 'Switch off after' button.
'Switch off after'
- ▶ Press the '<' or '>' button to change the switch-off time.
- ▶ Press the 'Save' button.
'Saved' appears briefly on the display.
'4/5'
- ▶ Press the 'L' button to exit programming mode.

Setting the water hardness

The harder the water is, the more frequently the JURA needs to be descaled. It is therefore important to set the water hardness accurately.

The water hardness was set when the machine was first used. You can change this setting at any time.

The total water hardness can be adjusted on a continuous scale between 1 °dH and 30 °dH.

- ▶ Press the 'P' button.
- ▶ Press the '>' button several times until '4/5' is displayed.
- ▶ Press the 'Water hardness' button.
'Water hardness'
- ▶ Press the '<' or '>' button to change the setting for the water hardness.
- ▶ Press the 'Save' button.
'Saved' appears briefly on the display.
'4/5'
- ▶ Press the 'L' button to exit programming mode.

Unit for amount of water

Example: Proceed as follows to change the unit for the amount of water from 'ml' to 'oz'.

- ▶ Press the 'P' button.
- ▶ Press the '>' button several times until '4/5' is displayed.
- ▶ Press the 'Units' button.
'Units'
- ▶ Press the 'oz' button.
- ▶ Press the 'Save' button.
'Saved' appears briefly on the display.
'4/5'
- ▶ Press the 'L' button to exit programming mode.

Language

Example: Proceed as follows to change the language from 'English' to 'Deutsch'.

- ▶ Press the 'P' button.
- ▶ Press the '>' button several times until '4/5' is displayed.
- ▶ Press the 'Choose language' button.
'Choose language'

i To display more languages, press the '>' button (bottom right).

- ▶ Press the button that corresponds to the language you want, e.g. 'Deutsch'.
'Gespeichert' appears briefly on the display.
'4/5'
- ▶ Press the 'L' button to exit programming mode.

Querying information

In the program item '5/5' you can view the following information.

- 'Product counter': number of prepared specialty coffees and hot water
- 'Day counter': number of prepared specialty coffees and hot water. This counter can be reset to zero.
- 'Maintenance counter': number of maintenance programs performed (cleaning, descaling etc.)
- 'Version': software version

Example: Proceed as follows to reset the **day counter**.

- ▶ Press the 'P' button.

4 Permanent settings in programming mode

- ▶ Press the '**>**' button several times until '**5/5**' is displayed.
- ▶ Press the '**Day counter**' button.
- ▶ Press the '**L**' button.
'Delete the day counter?'
- ▶ Press the '**Yes**' button.
'Saved' appears briefly on the display.
'5/5'
- ▶ Press the '**L**' button to exit programming mode.

5 Maintenance

WARNING

Use of maintenance products that are harmful to health and discharge of liquids during maintenance program. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Keep children away from the machine while it is performing a maintenance program.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ When using do not eat or drink.
- ▶ Keep maintenance products away from food, drink and animal food.
- ▶ Keep container tightly closed and dry. Keep in a cool place.

Your JURA has the following integrated maintenance programs:

- Rinsing the machine ('Rinse the coffee system')
- Changing the filter ('Filter')
- Cleaning the machine ('Clean')
- Descaling the machine ('Descale')

- i** Carry out each maintenance program when you are prompted to do so.
- i** Press the 'P' button to view a list of the maintenance programs. When the bar is completely filled with red, your JURA will prompt you to perform the appropriate maintenance program.

Rinsing the machine




You can start coffee system rinsing manually at any time.

- ▶ Place a receptacle under the coffee spout.
 - ▶ Press the '❖' button (white Maintenance symbol).
 - ▶ Press the 'Rinse the coffee system' button to start the rinse operation.
- 'Machine is rinsing', water flows out of the coffee spout. The operation stops automatically.

Inserting/changing the filter

Your WE6 no longer has to be descaled if you are using the CLEARLYL Pro Smart filter cartridge.


- i** Once the filter cartridge stops working (depending on the water hardness setting), the WE6 will prompt you to change the filter.
- i** CLEARLYL Pro Smart filter cartridges are available from specialized dealers.

Precondition: The start screen is displayed. The filter symbol  lights up red (if you are already using a filter and it is depleted).

- ▶ Remove and empty the water tank.
- ▶ Open the filter holder and remove the old CLEARLYL Pro Smart filter cartridge.
- ▶ Insert the **new** CLEARLYL Pro Smart filter cartridge into the water tank.
- ▶ Close the filter holder. It will click into place audibly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.


The machine automatically detects that you have just inserted/changed the filter cartridge.

‘Open switch’

- ▶ Turn the switch to the  position.

‘Filter is being rinsed’

‘Close switch’

- ▶ Turn the switch to the  position.



Cleaning the machine

After 180 preparations or 80 switch-on rinses, the JURA will prompt you to clean it.

WARNING

Non-recommended (e.g. liquid) cleaning agents may contain substances that could damage the machine or leave residues.

- ▶ Use only original JURA cleaning tablets. These are specially formulated for your machine.

⚠ WARNING

Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

- i** The cleaning program lasts approximately 20 minutes.
- i** Do not interrupt the cleaning program. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from specialized dealers.

Precondition: 'Clean machine' is displayed.

- ▶ Press the '⚙' button (red Maintenance symbol).
'Clean'
- ▶ Press the 'Start' button.
- ▶ Press the 'Next' button.
'Empty coffee grounds container'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Clean'
- ▶ Place a receptacle under the coffee spout.
- ▶ Press the 'Next' button.
'Machine is being cleaned', water flows out of the coffee spout.
The operation is interrupted, 'Add cleaning tablet'.
- ▶ Open the cover of the filler funnel for the cleaning tablet.





- ▶ Insert a JURA cleaning tablet into the filler funnel.
- ▶ Close the cover of the filler funnel.
- ▶ Press the 'Next' button.
'Machine is being cleaned', water flows out of the coffee spout several times.
The operation stops automatically.
'Empty coffee grounds container'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
Cleaning is now complete.

Descaling the machine

The JURA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

- i** If you are using a CLEARYL Pro Smart filter cartridge, you will not be prompted to descale.

⚠ WARNING

Non-recommended descaling agents (e.g. vinegar) may contain substances that could damage the machine or leave residues.

- ▶ Use only original JURA descaling tablets. These are specially formulated for your machine.

⚠ WARNING

Harmful and irritating descaling agent. Harmful if swallowed.
Irritating to eyes and skin.

- ▶ Keep children **AWAY**.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water. Remove contact lenses. Seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

NOTICE


If the descaling operation is interrupted, there may be damage to the machine.

- ▶ Allow the descaling program to run to the end.
-

- i** The descaling program lasts approximately 40 minutes.
- i** JURA descaling tablets are available from specialized dealers.
- i** If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out. Clean up any splashes immediately.

Precondition: 'Descalcify machine' is displayed.

- ▶ Press the '⚙️' button (red Maintenance symbol).
'Descalc'
- ▶ Press the 'Start' button.
- ▶ Press the 'Next' button.
'Empty drip tray'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Agent in tank'
- ▶ Remove and empty the water tank.
- ▶ Completely dissolve 3 JURA descaling tablets in a receptacle holding 17 oz (500 ml) of water. This may take several minutes.
- ▶ Pour the solution into the empty water tank and insert it into the machine.
'Switch open'
- ▶ Place a receptacle under the hot-water nozzle.
- ▶ Turn the switch to the ☞ position.
'Machine is being descaled', water flows out of the hot-water nozzle repeatedly.
The operation is interrupted, 'Switch close'.
- ▶ Turn the switch to the ⌚ position.
'Machine is being descaled', The descaling operation is continued.
The operation is interrupted, 'Empty drip tray'.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Fill water tank'

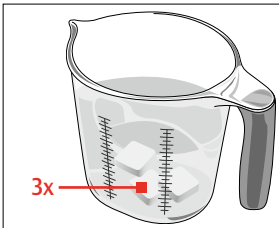



- ▶ Empty the receptacle and place it under the hot-water nozzle and the coffee spout.
- ▶ Remove the water tank and rinse it thoroughly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
'Switch open'
- ▶ Turn the switch to the ☰ position.
'Machine is being descaled', the descaling operation is continued.
The operation is interrupted, **'Switch close'**.
- ▶ Turn the switch to the ⊕ position.
'Machine is being descaled', the descaling operation is continued. Water flows out of the coffee spout.
'Machine is rinsing'
The operation is interrupted, **'Empty drip tray'**.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
Descaling is now complete.

i If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

Cleaning the bean container

Coffee beans may be covered with a slight oil film which remains on the walls of the bean container. These traces may negatively affect the coffee result. For this reason clean the bean container from time to time.

Precondition: **'Fill bean container'** is displayed.

- ▶ Switch the machine off with the On/Off button ⏻.
- ▶ Remove the aroma preservation cover.
- ▶ Clean the bean container with a soft, dry cloth.
- ▶ Fill the bean container with coffee beans and close the aroma preservation cover.

Descaling the water tank


Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.

- ▶ Remove the water tank.
- ▶ If you use a CLEARYL Pro Smart filter cartridge, remove this.
- ▶ Completely fill the water tank and dissolve 3 JURA descaling tablets in it.
- ▶ Leave the water tank with the descaling solution for several hours (e.g. overnight).
- ▶ Empty the water tank and rinse it thoroughly.
- ▶ If you use a CLEARYL Pro Smart filter cartridge, insert this again.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

6 Display messages

Message	Cause/Result	Action
'Fill water tank'	The water tank is empty. You cannot prepare any products.	► Fill the water tank (see Chapter 3 'Daily operation – Filling the water tank').
'Empty coffee grounds container'	The coffee grounds container is full. You cannot prepare any products.	► Empty the coffee grounds container and the drip tray (see Chapter 3 'Daily operation – Daily maintenance').
'Drip tray not fitted'	The drip tray is not inserted correctly or is not inserted at all. You cannot prepare any products.	► Fit the drip tray.
'Fill bean container'	The bean container is empty. You cannot prepare any specialty coffees, but hot water preparation is possible.	► Fill the bean container (see Chapter 1 'Preparing and using for the first time – Filling the bean container').
The filter symbol at the bottom of the display lights up red.	The filter cartridge no longer works.	► Replace the CLEARYL Pro Smart filter cartridge (see Chapter 5 'Maintenance – Changing the filter').
'Clean machine'	The JURA is prompting you to clean it.	► Perform cleaning (see Chapter 5 'Maintenance – Cleaning the machine').
'Decalcify machine'	The JURA is prompting you to descale it.	► Perform descaling (see Chapter 5 'Maintenance – Descaling the machine').
'Too hot'	The system is too hot to start a maintenance program.	► Wait for several minutes until the system has cooled or prepare a specialty coffee or hot water.

 7 Troubleshooting

Problem	Cause/Result	Action
Coffee only comes out in drips when it is being prepared.	The coffee is ground too finely and obstructs the system. The water hardness may not have been correctly set.	<ul style="list-style-type: none"> ▶ Set the grinder to a coarser setting (see Chapter 2 'Preparation – Adjusting the grinder'). ▶ Perform descaling (see Chapter 5 'Maintenance – Descaling the machine').
'Fill water tank' is displayed although the water tank is full.	The water tank float is trapped.	<ul style="list-style-type: none"> ▶ Descale the water tank (see Chapter 5 'Maintenance – Descaling the water tank').
Grinder is making a very loud noise.	There are foreign objects in the grinder.	<ul style="list-style-type: none"> ▶ Contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').
'ERROR 2' or 'ERROR 5' is displayed.	If the machine has been exposed to the cold for a long period of time, heating may be disabled for safety reasons.	<ul style="list-style-type: none"> ▶ Warm the machine at room temperature.
Other 'ERROR' messages are displayed.	–	<ul style="list-style-type: none"> ▶ Switch the JURA off with the On/Off button . Contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').

i If you were unable to solve the problem, contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').



 
8 Transport and environmentally friendly disposal

Transport / Emptying the system

Keep the packaging for your JURA. It should be used to protect the machine during transport.

In order to protect the JURA from frost during transport, the system must be emptied.




- ▶ Place a receptacle under the hot-water nozzle.
 - ▶ Turn the switch to the  position.
'Hot water', water flows out of the hot-water nozzle.
 - ▶ Remove and empty the water tank.
Hot water will continue to flow from the hot-water nozzle until the system is empty.
'Switch close'
 - ▶ Turn the switch to the  position.
'Fill water tank'
 - ▶ Press the On/Off button .
- Your JURA is switched off.

Disposal

Please dispose of old machines in an environmentally neutral way.



9 Technical data

Voltage	120 V ~, 60 Hz
Power	1450 W
Ambient conditions	Humidity max. 80 % Ambient temperature 10–35 °C
Conformity mark	
Pump pressure	static, max. 15 bar
Holding capacity of water tank (without filter)	105 oz (3 l)
Holding capacity of bean container	17.6 oz (500 g)
Holding capacity of coffee grounds container	max. 25 portions
Cord length	approx. 47 in. (1.2 m)
Weight	approx. 22 lb (10.0 kg)
Dimensions (W × H × D)	11.6 × 16,4 × 17,4 in. (29.5 × 41.75 × 44.36 cm)

Directives The machine complies with the following directives:

- Standard UL 1082
- Canadian Standard CSA C22.2 No. 64

10 Index

A

- Addresses 40
- Adjusting the product settings 21
- Aroma preservation cover
 - Bean container with aroma preservation cover 8
- Automatic switch-off 24

B

- Bean container
 - Bean container with aroma preservation cover 8
 - Cleaning 32
 - Filling 10
- Bus bar
 - Technical data 37
- Button
 - On/Off button 8

C

- Cleaning
 - Bean container 32
 - Machine 28
- CLEARYL Pro Smart filter cartridge
 - Changing 28
 - Inserting 28
- Coffee 15
 - Two coffees 15
- Coffee grounds container 8
- Coffee spout
 - Height-adjustable coffee spout 8
- Connect accessory 13
- Consistency of grind
 - Adjusting the grinder 16
 - Grinder adjustment switch 8
- Contact details 40
- Cover
 - Filler funnel for cleaning tablet 8
 - Water tank 8
- Cup platform 8
- Customer support 40

D

- Daily maintenance 18
- Descaling
 - Machine 30
 - Water tank 33

- Disable
 - Products 23
- Display 9
- Display messages 34
- Disposal 36
- Double product 15
- Drip tray 8

E

- Emptying the system 36
- Enable
 - Products 23
- Errors
 - Troubleshooting 35
- Espresso 15
 - Two espressos 15

F

- Filler funnel
 - Filler funnel for cleaning tablet 8
- Filling
 - Bean container 10
 - Water tank 18
- Filter
 - Changing 28
 - Inserting 28
- First-time use 11

G

- Grinder adjustment switch 8

H

- Height-adjustable coffee spout 8
- Homepage 10
- Hotline 40
- Hot water 17
- Hot-water nozzle 8
- Hot water preparation
 - Switch for hot water preparation 9

I

- Important safeguards
 - Safety 4
- Internet 10

J

- JURA
 - Contact details 40
 - Internet 10

L

- Language 25

M

- Machine
 - Cleaning 28
 - Daily maintenance 18
 - Descaling 30
 - Regular maintenance 19
 - Rinsing 27
 - Setting up 10
 - Switching off 19
 - Switching on 18
- Maintenance 27
 - Daily maintenance 18
 - Regular maintenance 19
- Messages, display 34

P

- Permanently setting the water for the cup size 15
- Permanent settings in programming mode 20
- Power cord 8
- Preparation 14
 - Coffee 15
 - Espresso 15
 - Hot water 17
 - Ristretto 15
 - Special coffee 15
 - Two coffees 15
 - Two espressos 15
 - Two ristretti 15
 - Two specialty coffees 15
- Problems
 - Troubleshooting 35
- Products
 - Disable 23
 - Enable 23
- Product settings
 - Adjusting 21
- Programming mode 20
 - Automatic switch-off 24
 - Enable or disable setting of cup volume 22
 - Language 25
 - One-off settings 23
 - Querying information 25
 - Setting the water hardness 24
 - Unit for amount of water 25

Q

- Querying information 25

R

- Regular maintenance 19
- Rinsing
 - Machine 27
- Ristretto 15
 - Two ristretti 15

S

- Safety
 - Important safeguards 4
- Settings
 - Permanent settings in programming mode 20
- Setting up
 - Setting up the machine 10
- Smart Connect 13
- Special coffee 15
- Switch for hot water preparation 9
- Switching off 19
- Switching on 18
- Switch-off
 - Automatic switch-off 24
- Symbol description 3

T

- Technical data 37
- Tel 40
- Transport 36
- Troubleshooting 35

U

- Unit for amount of water 25
- Use, First-time 11

W

- Water hardness
 - Determining the water hardness 10
 - Setting the water hardness 24
- Water tank 8
 - Descaling 33
 - Filling 18
- Website 10
- Wireless connection 13

11 JURA contact details / Legal information

JURA Elektroapparate AG
 Kaffeeweltstrasse 10
 CH-4626 Niederbuchsiten
 Switzerland

	USA: JURA Inc.	Canada: FAEMA
Customer Service		
Phone	1-800-220-5701	1-(855)-544-8600
E-Mail	info@us.jura.com	info@juracanada.ca
Opening Hours (EST)	Mon – Thu 9 am – 9 pm, Fri 9 am – 8 pm, Sat 9 am – 5 pm	
Distributor Address	20 Craig Road Montvale, NJ 07645	115 Matheson Boulevard East Mississauga, Ontario, L4Z 1X8
Phone	001 (201) 767-3999	1-(905)-501-8600
Fax	001 (201) 767-9684	
Internet	www.us.jura.com	www.ca.jura.com

@ You will find additional contact details for your country at www.jura.com.

Technical changes We reserve the right to make technical changes. The diagrams used in these instructions for use are for illustration purposes only and do not represent the original colors of the machine. Some details of your JURA may vary.

Feedback Your opinion is important to us! Use the contact details at www.us.jura.com.

Copyright The instructions for use contain information which is protected by copyright. It is not permitted to photocopy these instructions for use or translate them into another language without the prior written consent of JURA Elektroapparate AG.