



FLAIR KETTLE

110v - User Manual



CONTENTS

- 01 IMPORTANT SAFETY INSTRUCTIONS
- 04 GETTING TO KNOW YOUR FLAIR KETTLE
- 05 USING THE FLAIR KETTLE
- 08 CLEANING AND MAINTENANCE
- 10 BREWING TEMPERATURE GUIDE
- 11 TROUBLESHOOTING

Scan for Video Tutorials



<https://flaierespresso.com/pages/110v-kettle-tutorials>

IMPORTANT SAFETY INSTRUCTIONS

01

BEFORE USING THIS KETTLE READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN YOUR USER MANUAL AND ON THE APPLIANCE.

When using an electrical appliance, basic precautions should always be followed, including the following:

! DANGER!



Do not immerse the kettle, cord, plug or power base into water or other liquids to avoid danger of electrical shock.



Do not touch hot surfaces. Use handle.



Never leave the kettle unattended when in use (including when in Keep Warm mode). Keep out of children's reach.



Always unplug before moving, cleaning or when not in use.



02

IMPORTANT SAFETY INSTRUCTIONS



WARNING

INTENDED USE

· This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

· Use the appliance only for intended household purposes as described in this User Manual. Any other use is not recommended and may cause fire, electric shock, or injury to persons.

· Close supervision is necessary when any appliance is used by or near children.

· Children should be supervised to ensure that they do not play with the appliance.

· Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.

RELATED TO USE

· Place the kettle on a dry, flat, stable surface away from the edge of counter to prevent accidental tipping.

· Do not place the kettle (including the base) on or near heat sources such as stovetops, ovens, radiators, etc.

· Do not operate dry or below the "MIN" line. Dry boiling the kettle may result in permanent damage and potential fire.

· Do not fill the kettle above the "MAX" line. This may cause water to boil over and may cause scalding.

· To disconnect, use the On/Off Switch to turn the kettle off, then remove the plug from the wall outlet.

· Always unplug before moving, cleaning or whenever not in use. Allow to cool before putting on or taking off parts and before cleaning the appliance.

IMPORTANT SAFETY INSTRUCTIONS 03


TO PREVENT SCALDING

- Do not touch hot surfaces. Use handle.
- Do not touch the heated parts of the base or the walls of the kettle during or immediately after operation.
- Always handle with care when there is hot water inside the kettle.
- Make sure the lid is securely closed while the kettle is operating.
- Do not cover the spout opening while the kettle is in use.
- Do not cover the openings on the lid.
- Be aware of steam being emitted from spout or lid especially during refilling.

ELECTRICITY SAFETY

- To avoid fire or shock hazard, plug the appliance into a right AC electrical outlet.
- Make sure the voltage indicated on the label of the appliance is the same as your local supply.
- Do not use extension cords. Using accessory attachments is not recommended by the manufacturer and may result in fire, electric shock, or injury.
- To avoid an electrical overload, do not operate another high-wattage appliance on the same circuit.
- Use the included power base only.
- Do not allow the cord to touch hot surfaces.
- Do not use the kettle if it is malfunctioning, or if any part, including the base, cord, or plug, is damaged in any manner.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not let the power cord hang over the edge of a table or counter.
- Never try to repair the unit by yourself. Contact Flair for any repairs needed.

04 GETTING TO KNOW YOUR FLAIR KETTLE

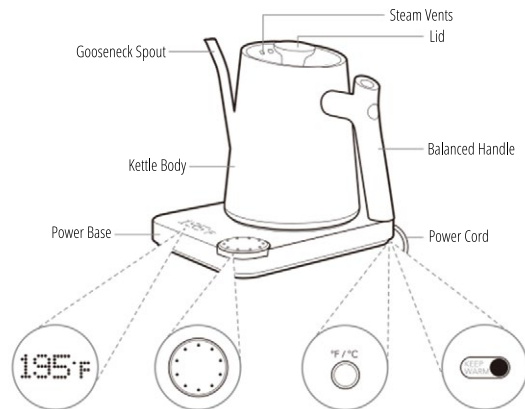

LCD Display

- Desired Temperature
- Real-time Temperature

Multifunction Button

- Turn ON/OFF
- To-The-Degree Temp Control
- Start Brew Stopwatch
- Check Set Temperature

°F/°C/Mute

- Temperature Display In °F or °C
- Kettle Sounds ON/OFF

Keep Warm

- Keep At Set Temperature For Up To 60 Minutes.

Specifications

Power Supply	110V-50Hz
Rated Power	1200W
Capacity	30 oz/ 9L

Heat to Selected Temperature



Fill with filtered water.
Do not exceed the "MAX" line.



Firmly close the lid.



Plug in. You will hear one beep.



Press once to turn ON. You will hear one beep.



Rotate to set desired temperature (104-212°F / 40-100°C).




Done when kettle beeps three times.


Note: For first time use, boil and dump water 1-2 times to ensure the kettle is clean.

Keep Warm Mode -

Keep Brew Water at Set Temperature for 60 Minutes

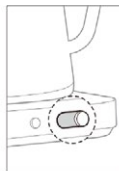

Turn ON Keep Warm Mode.
HOLD lights up for 1 second.
Follow steps to select temperature.

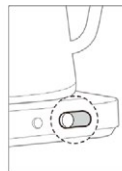


Turn OFF Keep Warm Mode.
HOLD lights up for 1 second.

Brew Stopwatch - For Keeping Track of Brew Times



Turn ON Stopwatch.
Long press on Multifunction Button.

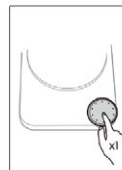

Turn OFF Stopwatch.
Press once on Multifunction Button.




If the kettle is lifted off the base and then returned to the base, the kettle will reset the 60-minute timer and continue heating the water.



If the kettle is lifted off the base after the stopwatch has started, the stopwatch will reset.


Additional Features

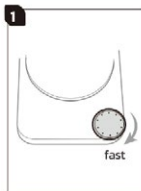

Check Set Temperature
Rotate fast.



Temp Display
in °F/°C
Press once.

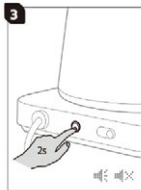

Kettle Sounds
ON/OFF
Long press.




Boil-Dry
Protection
Three beeps.



When sensing a dry boil situation, the kettle will automatically shut off and go into Standby Mode. You will be alerted by three beeps with "E1" on screen.

Cleaning Surfaces

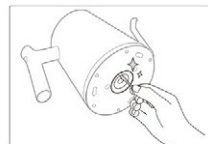

Wipe with a damp cloth or sponge and immediately dry. Do not use abrasive soaps, cleansers, or scouring pads.



Use a cotton swab **lightly** moistened with 75% alcohol. Wait for the alcohol to dry out completely.



Always unplug the kettle from the electrical outlet and allow it to cool completely before cleaning or descaling it.

Removing Scale



Fill with water to the "MAX" line.



Boil water, then unplug.



Add in some pieces of lemon, white vinegar or baking soda. Set aside for at least 1 hour.



Empty the kettle, disposing of excess water. Rinse with cool water.

185°F / 85°C**DARK ROASTS**

Highlights deeper molasses and chocolate flavors

194°F / 90°C**MEDIUM ROASTS**

Highlights sweet caramel and nutty flavors

203°F / 95°C**LIGHT ROASTS**

Highlights acidity and subtle floral flavors

Note: For heavy scale, use a descaling agent like Dezcal and follow all instructions.

The following troubleshooting guide addresses the most common problems. If problems persist, contact Customer Service at service@flairespresso.com

	Possible Causes	Solution
Error Code -E- on LED Display	The kettle body is removed from the power base after connected to power.	Place the kettle body back onto the power base and within 3 minutes, the kettle will continue working.
	The plug is not properly inserted in the power socket.	Insert the plug fully into powered electrical outlet. Do not use adaptors or extensions.
The Kettle Does Not Turn On	Lack of power or the cable is defective.	Ensure kettle is plugged in. Contact Flair Customer Service if there is damage to the cable.
	The safety device has tripped due to the kettle being operated without water.	Descalcify if needed. Add water until at least the minimum level is reached.
The Kettle Turns Off Before Boiling	Excessive scale build-up.	Clean and descale more frequently as instructed.
	Too little water or no water inside the kettle.	Add water until at least the minimum level is reached.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



WEEE Compliance

Correct Disposal of This Product (Waste Electrical & Electronic Equipment) Applicable in countries with separate collection systems.

This marking on the product, accessories or literature indicates that the product and its electronic accessories should not be disposed of with other household waste at the end of their working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



MADE IN CHINA



Questions or Concerns?
contact us at service@flairespresso.com

A Product of the
flair espresso
Company

28-B Hammond Street, Irvine, CA 92618 USA
service@flairespresso.com • www.flairespresso.com

© **intactidea**, All Rights Reserved