



## Quick Start Guide for Sette 270

Remove the grinder, bin, power cord, and bean hopper from the box. Install lid onto bean hopper. With the shut-off knob facing the 11 o'clock position, line up the 3 hopper tabs with the slots in the top of the grinder. Set the hopper in place and rotate firmly clockwise until the hopper clicks into place. Note: Grinder motor will not turn on with the hopper removed. Ensure the shut off knob is in the open position.


### Macro/micro grind size adjustment:

The Macro adjustment moves from coarse (31) to fine (1). **With the grinder running**, turn the knob to the right to move from coarse to fine.

Espresso: start at 5E Manual brew: start at 15E

The micro is the bottom adjustment ring, from finer (A) to Coarser (I). Turn to the right to move from coarse to fine.

The micro adjust is stepless with guidelines for repeatability.

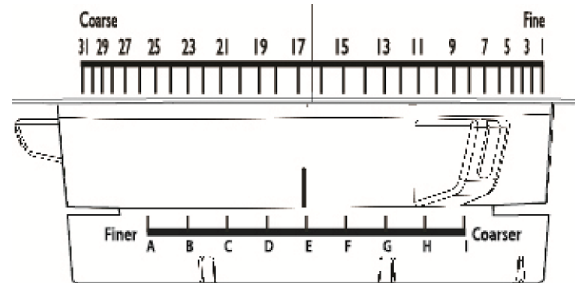


### Convertible device holder:

The black arms that hold the grounds bin can also be used to hold most popular brewing devices such as V60, Kalita Wave, Clever, and Able Kone. To convert to a portafilter holder, push in on the right arm and swing it down and to the left. To return to original position, push in on the right arm and rotate to the right and up. The left arm will automatically move into position. In the center, above the arms, is a hook for holding the lip of your portafilter providing stability. Release the hook by pushing down and rotating the button.

**Warning: The Sette grinds at a very high speed, be careful not to overfill your portafilter or bin! If a mound of coffee backs up into the chute it will clog the grinder. Clogged grinders are not user repairable.**

### Time Based Grinding Operation

Place the portafilter holder or the ground bin in the grinder. Press a preset button (1,2,3). The screen will show the corresponding programmed grind time in seconds. Press Start (>||) button to begin grinding. While grinding, the screen will count UP the seconds and stop when the preset time is reached. When the screen reaches the preset time, the motor will stop and the display will reset again to the programmed time. For manual quantities of ground coffee, press **and hold** the START button until you obtain the desired amount of coffee, then release the START button, the grinder will then stop with the screen showing the total amount of seconds run.

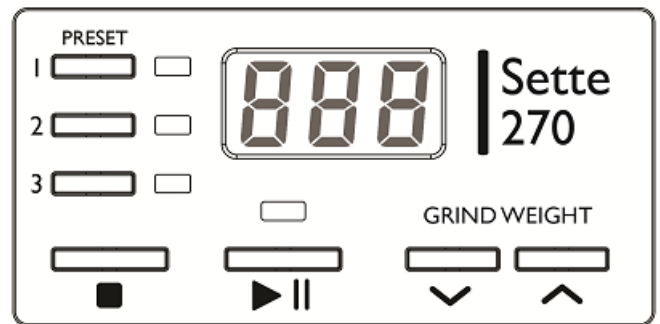

### Programming

The Sette 270 is equipped with three programmable buttons. The buttons are simply labeled 1,2,3. These programmable buttons only adjust the amount of grind time, they do not adjust the grind setting (i.e. Coarse/Fine). Each button comes from the factory with the following presets: Time: 1=10s, 2=15s, 3=30s

You can easily program more or less grinding time as follows:

1. Select a Preset button.
2. Press the up or down arrow buttons to adjust the seconds
3. Once you have reached the desired time setting, press and hold the desired preset button for 3 seconds. The screen will blink to confirm the setting is stored.

To program the other buttons repeat steps 1-3.